
VELKYNE

FITTING GUIDE

TEMPERED GLASS GARMIN EDGE 1030

0.5 mm tempered glass, oleophobic coating, touch preserved, cut for the Edge 1030 and 1030 Plus. One fitting only: five minutes, in order.

GARMIN EDGE 1030 / 1030 PLUS · TEMPERED GLASS 0.5 MM · OLEOPHOBIC

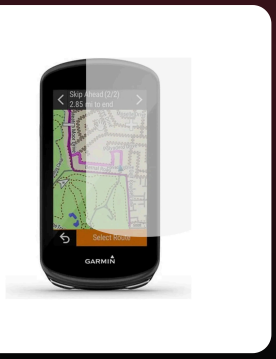

Before fitting

- A room with **no dust in the air**: the bathroom right after a shower works well.
- Clean hands, computer switched off, screen dry and at room temperature.
- Something to clean and de-dust with: a slightly damp wipe or alcohol, a microfibre cloth, adhesive tape or a dust-removal sticker.
- Cut for the 1030; the 1030 Plus has the same body and screen, so it fits too. It does not fit the 1040, whose screen is different.

Fitting, step by step

1. **Clean the screen** with alcohol or the damp wipe, dry it with the microfibre, then dab it with the tape to pick up the last specks of dust. Check against the light.
2. **Dry-fit the glass** with its film still on: it covers the screen without riding onto the frame and clears the buttons. Note this position.
3. **Peel the film** off the adhesive side, holding the glass by its edges. Do not touch the sticky side again.
4. **Lay it from one side.** Line up one edge on the mark, then let the glass settle: the adhesive spreads by itself within seconds.
5. **Push the air out** from the centre to the edges with a soft card or the microfibre. Any remaining micro-bubbles clear within 24 to 48 h.

Specifications

Compatibility	**Edge 1030**	Also fits	**Edge 1030 Plus**
Thickness	**0.5 mm**	Material	**Tempered glass**
Surface	**Oleophobic**	Touch	**Preserved**

IF SOMETHING GOES WRONG

- **Trapped dust** (white dot with a halo): lift the nearest corner with the tape, pick the particle off with another piece of tape, lay it back down.
- **Misaligned glass**: lift it off entirely right away and start again from step 2.
- **Stubborn bubble** after 48 h: there is dust underneath, see the first point.

DON'T

- No fitting on a cracked screen, nor under a case already in place: the silicone case goes on after the glass. A glass cracked by an impact has done its job: replace it.

On video

Independent tutorial, scan to watch.

Install tempered glass screen protector (Edge 530)
zulkifli · English

Need help?

velkyne.com/contact
Our team answers your questions about fitting and compatibility.

© 2026 Velkyne. All rights reserved.